
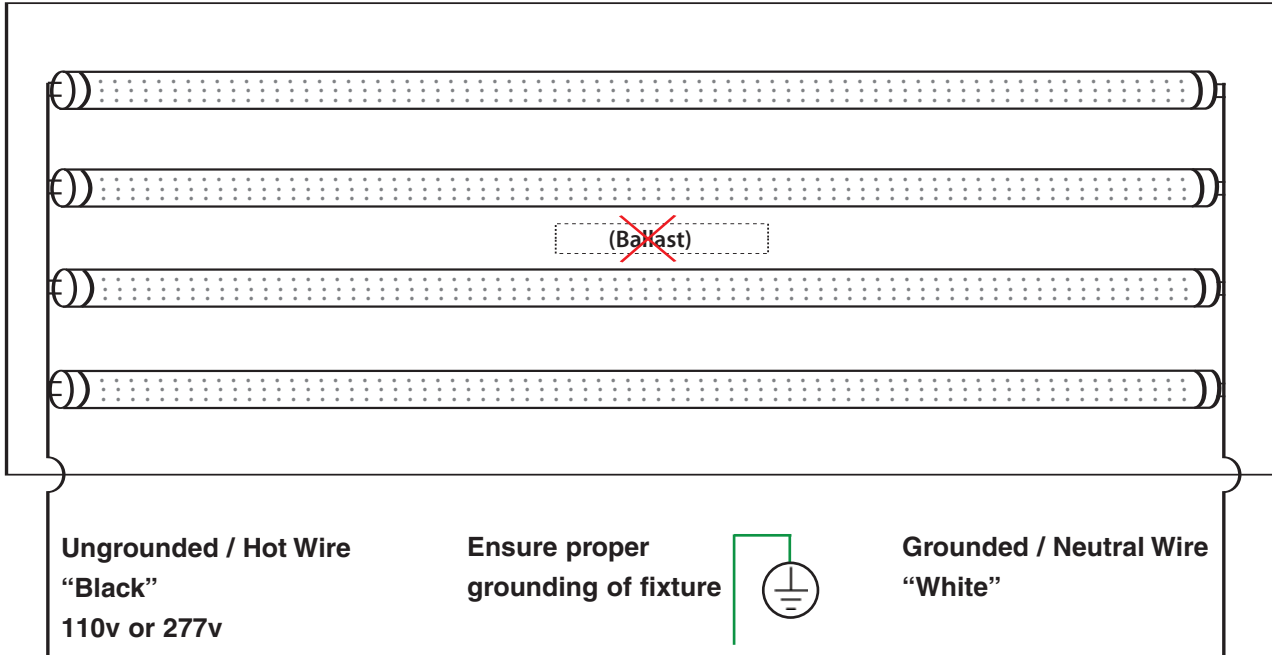


LED T8 REPLACEMENT TUBE WIRING RETROFIT DIAGRAM

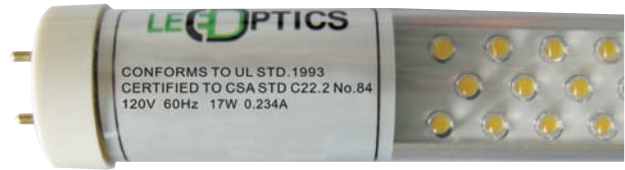

T8 - RETROFIT WIRING DIAGRAM

***WARNING:**

Shut off power at the breaker before attempting retrofit.

Disconnect the live and neutral wires from the ballast and connect to the sockets as shown above.

The ground wire must be left as is.

**Retrofitting fixtures should be completed by licensed electrician only!

Please note that some new fixtures have the starter built into the ballast, so there may not be an external starter circuit in-line. If you still do not understand the process after reading this sheet, please do not attempt to perform this procedure yourself. Improper wiring can cause fire, electrical shorts or other serious hazards. If not performed properly, you might also permanently damage the LED T8 tube and other surrounding light fixtures.

*For those that demand the best...
nothing else comes close!*

